## FGTech Galletto 2-Master BDM function

1. When you open the FgTech software, you will see the tip as the following picture shows you, then you just need to click " OK "

🔁 FGTech 📃 🗖 🗙								
文件(E) 编辑(E) 查看(Y) 收藏(A)	工具(I) 帮助(U)		<u></u>					
🚱 后退 🔹 🌍 🕘 🏂 🎾 捜索	▶ 文件夹 🛄 -							
地址 @) 🔂 C:\Documents and Settings\uobd\My Documents\FGTech 🔹 🔁 转到								
文件和文件夹任务	chk	documents	download_update					
● 移动这个文件 ● 复制这个文件	EOBD2_LOG	fgtech_new_driver	help					
→ 以电 文件 EOBD2 × 删除 NUOVO IMPORTANT	E AGGIORNAMENTO DISPONIBILE.	SCARICARIO PRIMA POSSIBILE -	s_eobd2					
AVAILABLE, DOWNLOAD AS SOON AS POSSIBILE 其它位置 単位 単位 単位 単位 単位 単位 単位								
<ul> <li>□ wobd</li> <li>□ 数的文档</li> <li>□ 共享文档</li> </ul>	File dell'applic Microsoft Corpor	FGTech +39 49 7 FGTech +39 49 7	CFG 文件 1 KB					
9 我的电脑 9 网上邻居	<b>fgt2xx. dll</b> 3.1.19.0 FGT2XX Dynamic L	FGTech_DRIVER_LI PDF 文件 400 KB	FGTech_DRIVER_LI PDF 文件 33 KB					
详细信息	FGTech_DRIVER_LL PDF 文件 81 KB	Gcheck. dll 1.1.0.0 FGTech +39 49 7	GHelper GHelper +39 49 FGTech +39 49 7					
P I	Informazioni 文本文档 3 KB	ISTRUCTION_SLAVE PDF 文件 183 KB	multiROM. dll					
	README_SETUP	<b>README_SETUP</b> 立本文档	TAB_COMPARAZIONE					

2. On the screen to select the car model, choose BDM\JTAG, and then click " OK "

Select driver						6
CAR	TRUCK	TRACTOR - MARINE	MOTORBYKE		BD	// JTAG
Calent Malen			Cala	ad Duinen		
BDM/ITAG_MODE		rs: M MPC	Sele	55x/56x		
BOWNTHO MODE		MIMI C				
[BDM ALL MPC55x/56x] 'BD SEGUIRE ISTRUZIONI DI BC	DM" ( READ WRITE MICRO ) NOT IN DOCUMENTI - FOLLO	/ FLASH / EEPROM ) JWY BOOT INSTRUCTION IN E	OCUMENTS			OK Cancel
3. Select " Conne	ect "					
3. Select " Conne EOBD2 By F.G. T	echnology					
3. Select " Conne EOBD2 By F.G. T	echnology					
3. Select " Conne BOBD2 By F.C. T Language Master Exit CONNECT	ect " echnology	MASTER		∏ <mark>  11,4</mark> V	0050-01	03
3. Select " Conne Constant of the second se	ect " echnology Select Driver BDM/JTAG_MODE	BDM MPC		∏ <mark>  11,4</mark> V	.0050-01	03
3. Select " Conne EOBD2 By F.G. T Language Master Exit CONNECT Read All	ect " echnology Select Driver BDM/JTAG MODE MPC 55x/55x	MASTER BDM MPC		∏∏ <mark>11,4</mark> ¥	.0050-01	03
3. Select " Conne EOBD2 By F.C. T Language Master Exit CONNECT Read All WriteAll	ect " echnology Select Driver BDM/JTAG MODE MPC 55x/56x	MASTER BDM MPC		∏∏ <mark></mark>	.0050-01	03
3. Select " Conne EOBD2 By F.G. T Language Master Exit CONNECT Read All WriteAll	ect " echnology Select Driver BDM/JTAG MODE MPC 55x/56x	BDM MPC		∏∏ <mark>. 11.4 V</mark> .	0050-01	03
3. Select " Conne EOBD2 By F. C. T Language Master Exit CONNECT Read All WriteAll Read Ext Flash Write Ext Flash	ect " echnology Select Driver BDM/JTAG MODE MPC 55x/56x ECU Data	BDM MPC	Prc	gramming Data File	.0050-01	03
3. Select " Conne EOBD2 By F. G. T Language Master Exit CONNECT Read All WriteAll Read Ext Flash Write Ext Flash Read Int Flash Micro	ect " echnology Select Driver BDM/JTAG MODE MPC 55x/56x ECU Data	BDM MPC	Prc	gramming Data File	.0050-01	03
3. Select " Conne EOBD2 By F. G. T Language Master Exit CONNECT Read All WriteAll Read Ext Flash Write Ext Flash Read Int Flash Micro Write Int Flash Micro	ect " echnology  Select Driver  BDM/JTAG MODE MPC 55x/56x  ECU Data	BDM MPC		gramming Data File	.0050-01	03
3. Select " Conne EOBD2 By F. C. T Language Master Exit CONNECT Read All WriteAll Read Ext Flash Write Ext Flash Read Int Flash Micro Write Int Flash Micro Read Exprom	ect " echnology  Select Driver  BDM/JTAG MODE MPC 55x/56x  ECU Data	BDM MPC		gramming Data File	.0050-01	03
3. Select " Conne EOBD2 By F. C. T Language Master Exit CONNECT Read All WriteAll Read Ext Flash Write Ext Flash Read Int Flash Micro Write Int Flash Micro Read Exprom Write Exprom	ect " echnology  Select Driver  BDM/JTAG MODE MPC 55x/56x  ECU Data Commands	BDM MPC		gramming Data File	.0050-01	03
3. Select " Conne EOBD2 By F. G. T Language Master Exit CONNECT Read All Write All Write Ext Flash Write Ext Flash Read Int Flash Micro Write Int Flash Micro Read Eeprom Write Eeprom	ect " echnology Select Driver BDM/JTAG MODE MPC 55x/56x ECU Data Commands	BDM MPC		gramming Data File	.0050-01	03
3. Select " Conne EOBD2 By F. C. T Language Master Exit CONNECT Read All Write All Write Ext Flash Read Ext Flash Write Ext Flash Read Int Flash Micro Write Int Flash Micro Read Exprom Write Ext Flash	ect " echnology  Select Driver  BDM/JTAG MODE MPC 55x/56x  ECU Data Commands	BDM MPC		gramming Data File	.0050-01	03

4. After the communication between ECU and the fgtech software, select " Read All " " Read ext flash " " Read Eeprom "

🔄 EOBD2 By F.G. T	echnology			X
<u>L</u> anguage <u>M</u> aster <u>E</u> xit				
CONNECT	Select Driver	MASTER	11,4 V	.0050-0103
Read All	BDM/JTAG MODE	BDM MPC		
WriteAll	MPC 55x/56x			
	. – ECU Data –			
Read Ext Flash	MPC 561/562			
Write Ext Flash	EEPROM 1Kb			
Read Int Flash Micro				
Write Int Flash Micro				
Read Eeprom	1			
Write Eeprom	Commands			
	DATA READING Start data readingOK			<u> </u>
E×it				<u></u>
100%				0' 10"

5. Attention for the power adapter connection and BDM cable connection, make sure that you don't connect it oppositely, Or it will damage the ECU.



6.Attention for the BDM ECU cable connection, can not make mistake for the cable color, please be carefull.

